



VTech CS6114 Keypad Replacement

A step-by-step guide to replacing the keypad for a VTech CS6114 cordless phone.

Written By: Sheckeem Daley



INTRODUCTION

Replace the keypad on your VTech CS6114.



TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Hold handset with one hand with the keypad facing downward.

Step 2



- Place thumb on the indentation located at the top of the battery cover.
- Press down and gently slide the cover off the back of the handset.
- Set the battery cover aside.

Step 3



 
- Use thumb and index finger to gently pull the wired connection from the handset.
- Remove the battery.

Step 4 — Handset Motherboard




- Using a screwdriver, remove the two 10.0mm Philips #0 screws at the bottom corners of the rear casing of the handset.

Step 5

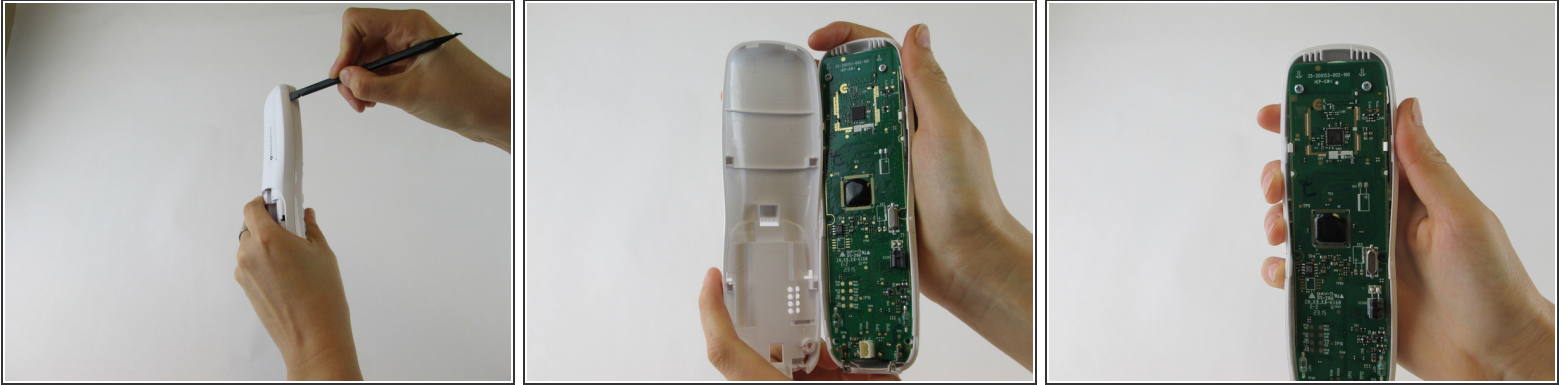

- Separate the rear casing from the front by running the black spudger along the crevice on the outer edge of the phone.

 Step 6

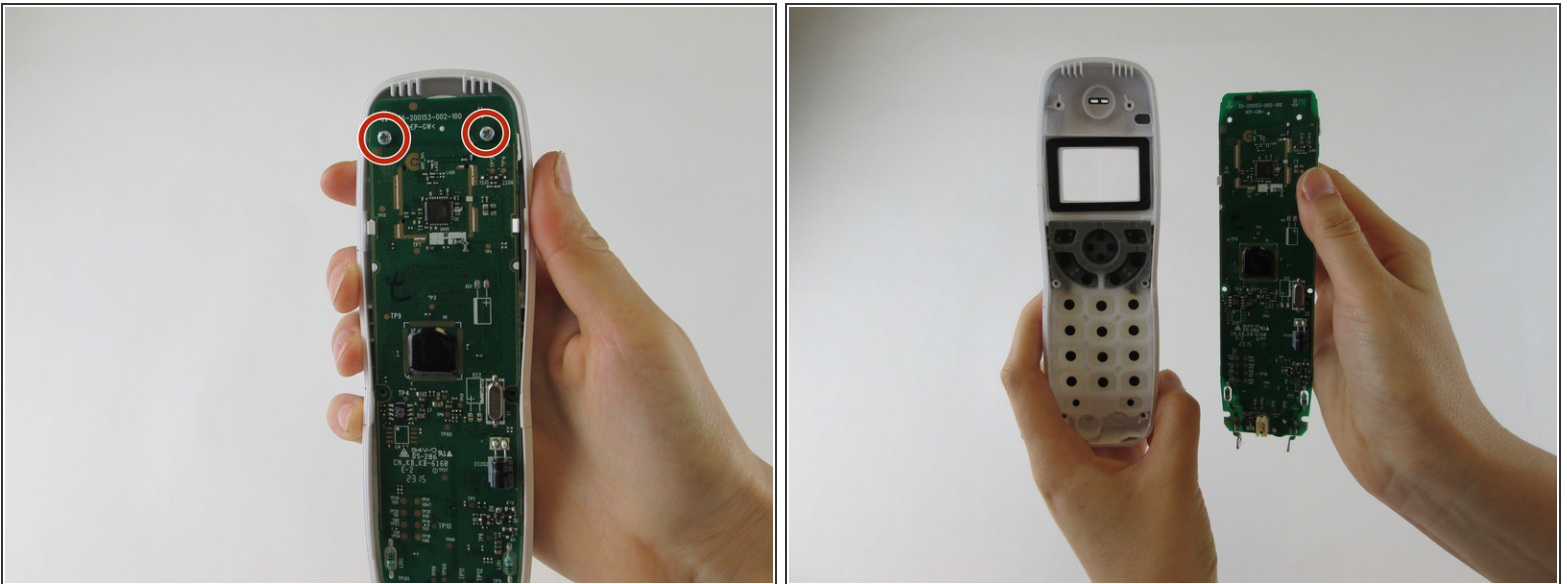

- Using a screwdriver, remove the two 10.0mm Philips #0 round head screws at the top corners of the handset motherboard.
- Remove the handset motherboard.

Step 7 — Keypad



- Holding the front casing of the handset, gently push up on the menu key
- Remove the keypad from the interior of the front casing using a peeling motion.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-17 05:42:22 AM.